

# BRUNO WESSEL LIMITED

## Troubleshooting

**ONLY TRAINED PERSONNEL SHOULD SERVICE THIS EQUIPMENT. THE STEEL HEAD ASSEMBLY OF THE STUD GUN IS SPRING LOADED. USE EXTREME CAUTION WHEN DISASSEMBLING.**

<b>PROBLEM :</b>	<b>CAUSE :</b>	<b>REMEDY :</b>
Gun shoots blanks (no stud comes out)	Clogged feed tube (0130)	Remove blockage
	Bent Inserting Fingers (0126)	Replace all three (3) Inserting Fingers
	Broken O-Ring (0088)	Replace the O-Ring
	Broken or worn Internal Finger (0127)	Replace all three (3) Internal Fingers
Studs seem to jump out of hole while inserting	Broken External Finger (0084)	Replace all three (3) External Fingers
More than one stud comes out while inserting	Broken or worn Internal Finger (0127)	Replace all three (3) Internal Fingers
Air leaks from trigger	Broken or worn O-Rings (0090 and 0091)	Replace the O-Rings
	Broken Trigger (0098)	Replace the Trigger
	Worn Trigger sleeve (0099)	Replace the Trigger Sleeve (This is a very difficult job. Consider factory repair)
Air leaks from front of gun	Loose Ring Nut (0133)	Tighten Ring Nut
	Broken or worn Piston Cup (0092 or 0383)	Replace the Piston Cup
	Broken Piston (0129)	Replace the Piston (should also replace seals)
Inserting Fingers (0126) will not retract into gun	Broken Compression Spring (0134)	Replace the Compression Spring